




Stor-Com

# HOW TO INSTALL "PLUG-N-PAGE"

Hook up your wiring exactly as you have in the past. Run your 6 or 4 conductor wire to the desired area. Mount your metal back plate to the wall or pole bringing your wire through the middle hole in the back plate. Strip the insulation off of the wires approximately 1/2" or more. Wrap the ends of the wires around the screws in the barrier strip mounted on the back plate keeping the color code the same from the page adapter. Leave the pigtail assembly on the barrier. **NOTE:** The color code does not necessarily have to match the charts below but to assure continuity continue the same code through out the installation.

1. LIGHT 2 white	2. LIGHT 1 green	3. COMMON yellow	4. PAGE red	5. TALK 1 black	6. TALK 2 brown
---------------------	---------------------	---------------------	----------------	--------------------	--------------------

BACK PLATE LABEL

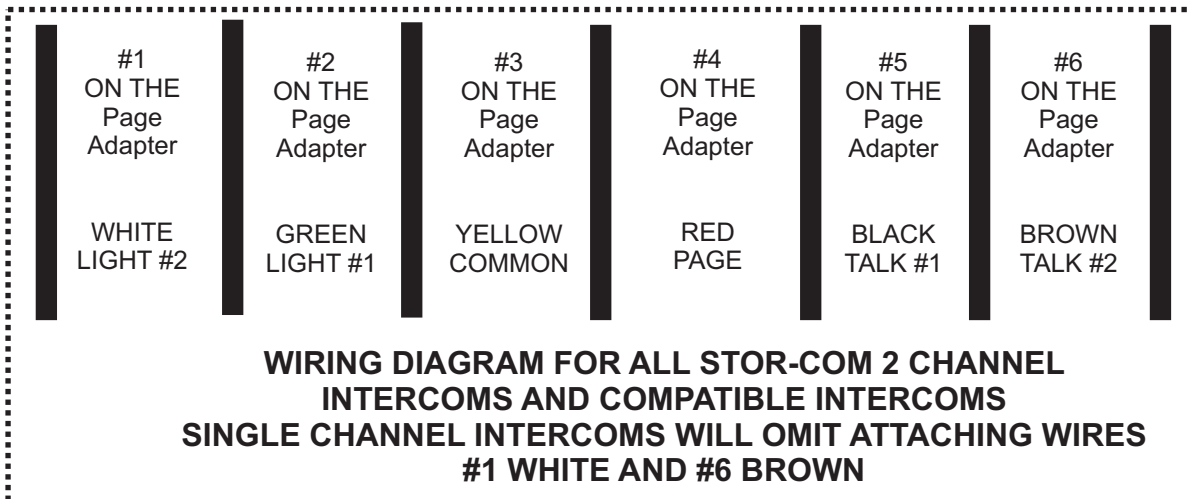

THEN JUST

**PLUG**  **N**  **PAGE**



## "Keep it Simple - Simply Stor-Com"

Stor-Com, Inc., 4547 Gateway Circle - Suite 8, Kettering OH 45440

1-800-356-0368 Fax 1-937-428-9656

Web site: [WWW.Stor-Com.com](http://WWW.Stor-Com.com) E-Mail: [sales@Stor-com.com](mailto:sales@Stor-com.com)